



Battery Terminal Voltage = $V_r + V_{\text{ocv}}$
 Battery Terminal Voltage = $I * R + V_{\text{ocv}}$

You can measure:

- * Battery Terminal Voltage
- * I (Current into the battery)
- * R (Discovered through experimentation by battery manufacturer)